


2.20 Pocket calculator

SEAMCAT contains a builtin pocket calculator. Select the command < Tool/Pocket Calculator> from the Workspace menu, click on the pocket calculator icon of the toolbar () or CTRL+SHIFT+C to activate the Pocket calculator window:

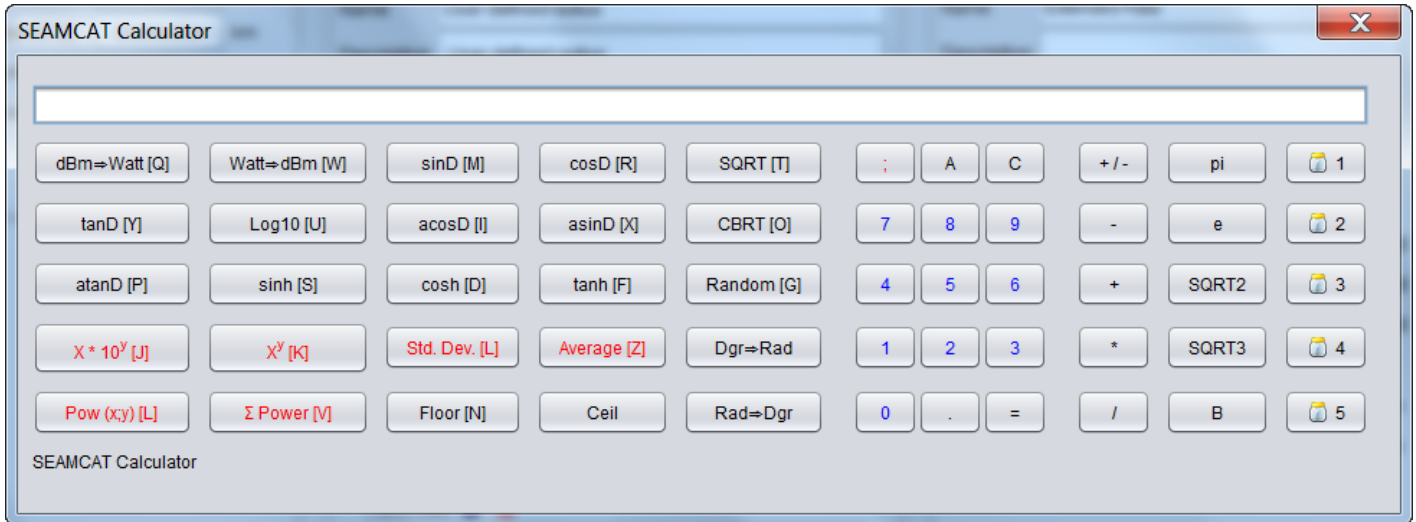


Figure 58: SEAMCAT pocket calculator

The calculator can also be accessed from the graphical user interface when a scalar is to be entered as shown in the example of Figure 59 with the wall loss attenuation of the Extended Hata propagation model.

 


Figure 59: Access to the calculator from the GUI panel

Revision #1

Created 2026-04-14 09:14:53 UTC by ECO TECH

Updated 2026-04-14 09:16:13 UTC by ECO TECH