

3.5 Extract results vectors (dRSS, iRSS etc...)

You can extract the dRSS vectors from the “Results” panel in the newly create workspace results in Figure 95

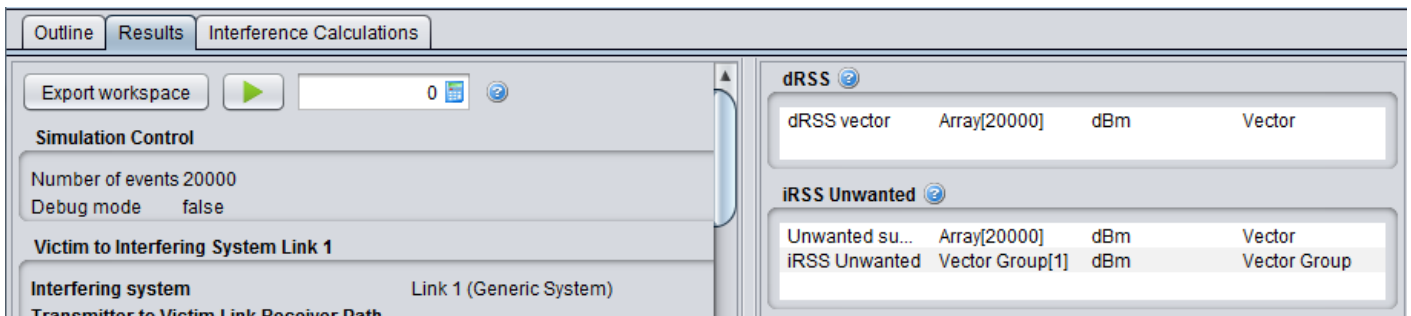


Figure 95: Results panel to extract any of the vectors generated by SEAMCAT

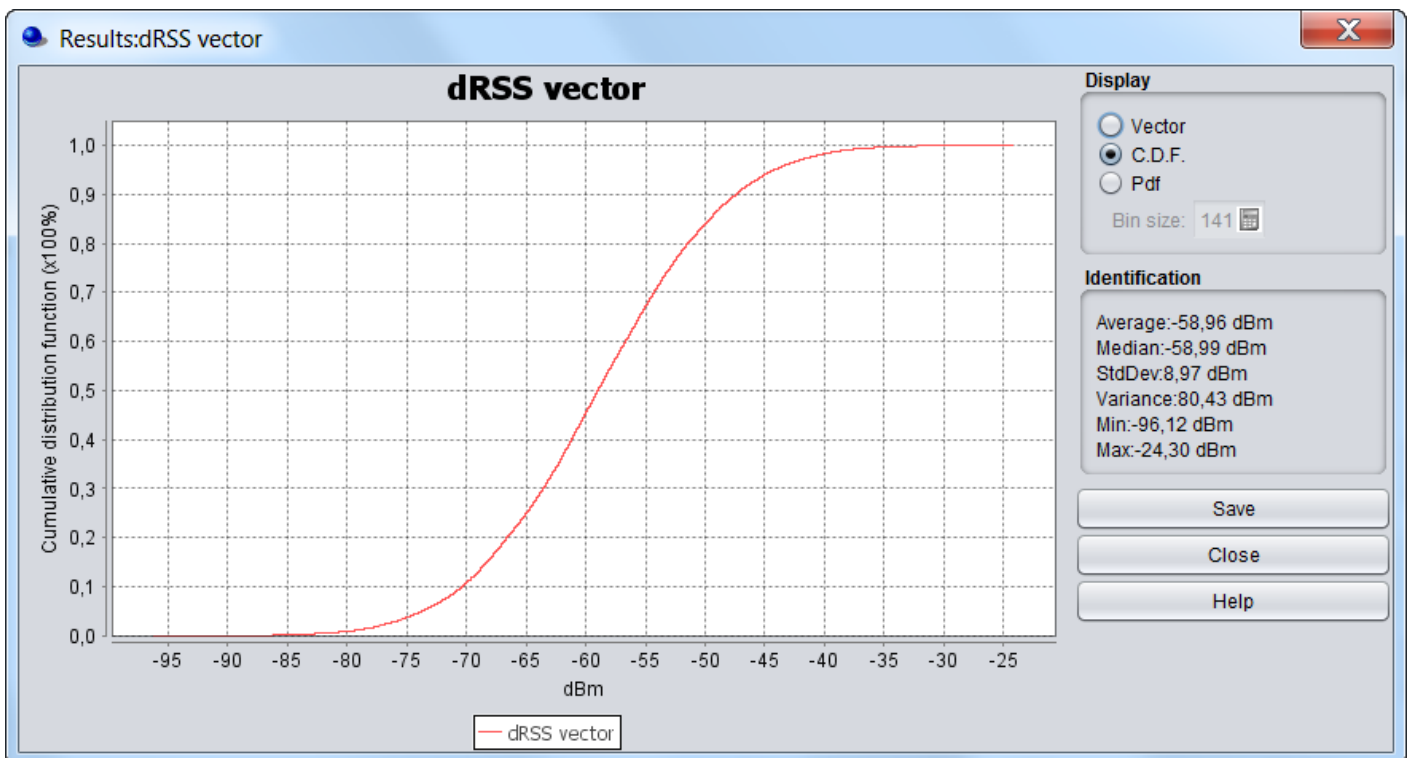


Figure 96: Example of the dRSS vector

When double clicking on a result vector field (Figure 36 (#1)) the display panel as shown in Figure 96, offers three options to display the results in vector (limited to 20.000 events), CDF and PDF format.

In addition, some statistical information can be displayed such as average, median, standard deviation (StdDev), variance, min and max. Further information about these statistics (i.e. how they are computed) are to be found in Section A1.5.

Revision #1

Created 2026-04-14 10:04:29 UTC by ECO TECH

Updated 2026-04-14 10:05:18 UTC by ECO TECH