

# 5.1.2 General

The user can enter the frequency. The frequency value is overwritten at the “Scenario” tab level.

**Table 8: Generic system - General panel**

| Description | Symbol | Type                   | Unit | Comments   |
|-------------|--------|------------------------|------|--|
| Frequency   | f      | Distribution or Scalar | MHz  | Distribution of the centre frequency of the system |

You have access to 3 sub tabs to set the generic system:

- Receiver: This will be used either as VLR or ILR;
- Transmitter: This will be used either as VLT or ILT;
- Transmitter to Receiver Path (i.e. either VLT ->VLR or ILT ->ILR).

---

Revision #1

Created 2026-04-15 06:13:22 UTC by ECO TECH

Updated 2026-04-15 06:14:06 UTC by ECO TECH