

# 5.3.3 Transmitter antenna pointing

This is the same panel as in section 5.2.1 so that transmitter characteristics can be imported/exported from/to the library to/from the workspace and you can freely chose a name and a description.

---

Revision #1

Created 2026-04-15 06:34:24 UTC by ECO TECH

Updated 2026-04-15 06:34:31 UTC by ECO TECH