

## 8.2.2 General

You can enter the frequency. The frequency value is overwritten at the “Scenario” tab level.

**Table 26: General system panel**

Description	Symbol	Type	Unit	Comments
Frequency	f	Distribution or Scalar	MHz	Distribution of the centre frequency of the system

It is used to define the necessary parameters for the modelling of CDMA systems. The CDMA interface has been split into 2 tabs.

---

Revision #1

Created 2026-04-17 10:33:54 UTC by ECO TECH

Updated 2026-04-17 10:34:35 UTC by ECO TECH